




# Nameplate Camera

User Manual

# 1 Product Introduction

Nameplate camera (hereinafter referred to as “device”) is a wearable intelligent digital nameplate with audio and video recording functions. It offers two types: with screen or without screen. The device with screen adopts the electronic ink screen that enables flexible settings of digital nameplate information.

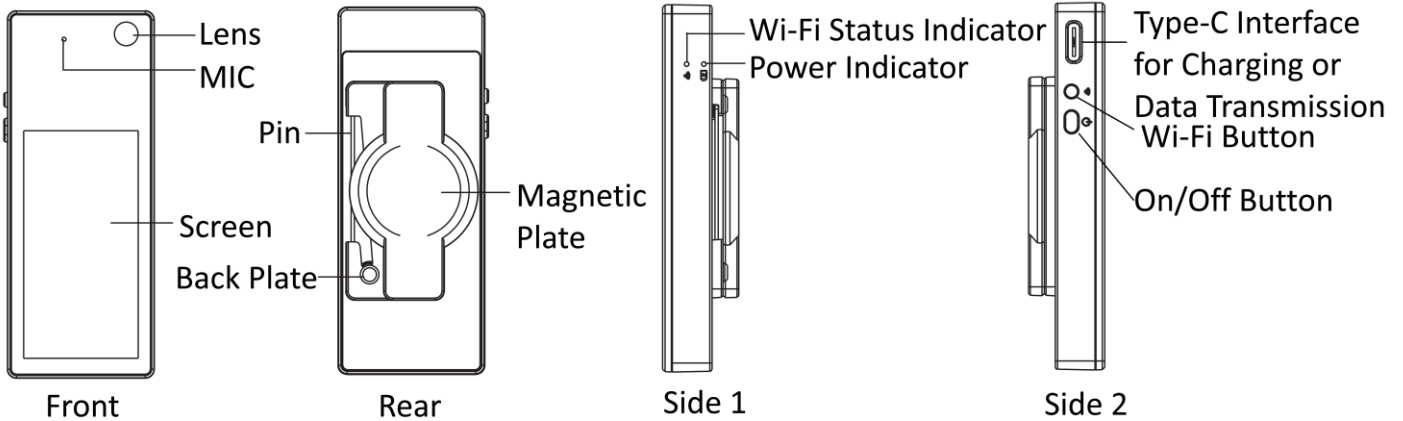

## Note

The device without screen has no screen. The actual device prevails.

Button	Description	Indicator	Description
On/Off button	<ul style="list-style-type: none"> <li>● When the device is off, hold it until the power indicator changes to red, and the device starts up.</li> <li>● When the device is on, hold it until the power indicator is off, and the device shuts down.</li> <li>● When the device is on, press it to start recording, and the power indicator will be flashing green (slowly). Then press it again to stop recording, and the power indicator</li> </ul>	Power indicator	<ul style="list-style-type: none"> <li>● Flashing red (fast): Device exception (low battery, storage exception, storage full, etc.).</li> <li>● Flashing red (slowly): The device is being charged.</li> <li>● Solid red: The device is fully charged.</li> <li>● Flashing green (slowly): The device is recording.</li> <li>● Solid green: The device is on standby.</li> <li>● Flashing green (fast):</li> </ul>

	will be solid green.		The device is not activated.
Wi-Fi button	When the device is on, hold it to enable the Wi-Fi AP. Then press it again to disable the Wi-Fi AP.	Wi-Fi indicator	<ul style="list-style-type: none"> <li>●Flashing blue (slowly): The Wi-Fi AP is on, and the mobile terminal is connected.</li> <li>●Flashing blue (fast): The Wi-Fi AP is on, but the mobile terminal is not connected.</li> </ul>


## 2 Device Wearing

### Danger

The device adopts magnetic design. DO NOT use the device if you had surgery before (for example, installed metal or pacemaker in the body).

The device supports to wear with the magnet or pin. When wearing light clothing, you can put the device on your clothing and fix it with the magnetic plate. When wearing thick clothing, you can use the pin on the back plate to clip the device on your clothing, and use the magnetic plate to fix the device.


Keep your clothing flat when wearing the device to avoid affecting the recording effect.

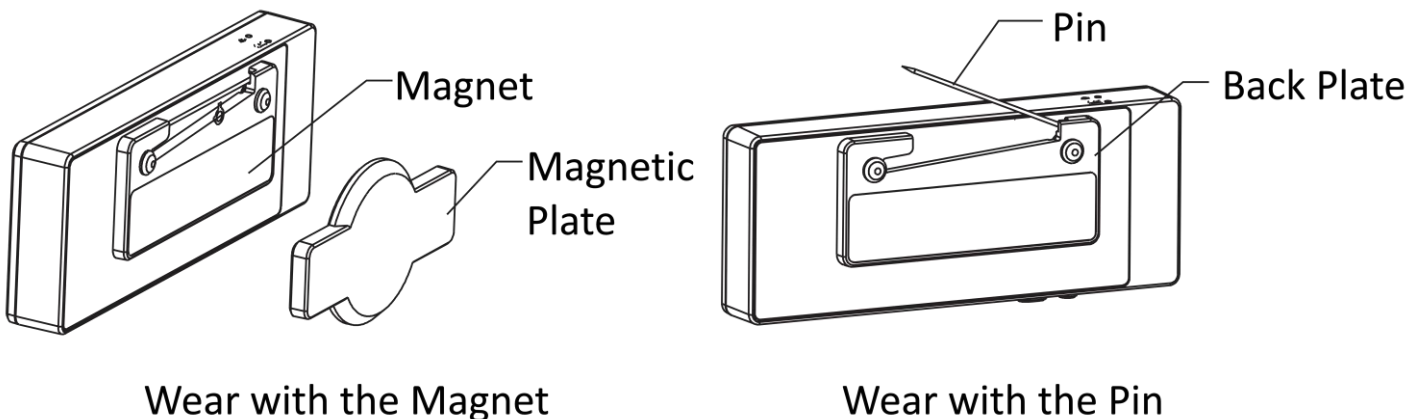

### 3 Device Operation via Mini AI Assistant Application

You can realize the live view, remote video playback, device configuration, file management, etc. via the Mini AI Assistant application. Scan the QR code below to get the user manual of Mini AI Assistant application.



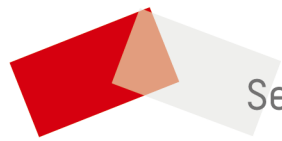

See Far, Go Further